


OPERATION MANUAL

FOAM EXTINGUISHER



1. PULL SAFETY PIN

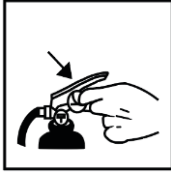

2. STAND BACK 2 METRE,
AIM NOZZLE AT BASE OF FIRE



3. SQUEEZE LEVER, RELEASE TO STOP



**WARNING: DO NOT USE ON LIVE
ELECTRICAL EQUIPMENT**

MAINTENANCE MANUAL

FOAM EXTINGUISHER



Inspection

Inspect the extinguisher monthly and service it annually.

Recharge after use

Refill after any operation. The extinguisher should be refilled by the Manufacturer or a competent agent using materials specified by the Manufacturer only.

Recharge instructions

Discharge extinguisher completely before removing valve assembly, thoroughly clean extinguisher components of all residual extinguishing agent. Replace any damaged parts, lubricate stem, o-ring, valve assembly. Fill cylinder with agent according to manufacturer's instructions. Refit safety pin, replace anti-tamper seal.